

REDOXY NANO

ADVANCED NANOBUBBLE OXIDATION & BENTHIC NUTRIENT SEQUESTRATION SYSTEM

INTRODUCING

MOLECULAR ARCHITECTURE & FUNDAMENTALS

RedOxy NANO™ is an engineered multi-component catalytic solid reagent formulated for targeted aquatic remediation, rapid cyanobacterial cell lysis, and permanent benthic nutrient immobilization. The composite material incorporates an active solid perhydrate crystalline matrix (950 g/kg) co-formulated with a stabilized iron(III) mineral catalyst core (50 g/kg).

Unlike conventional copper algaecides or passive peroxides, **RedOxy NANO™** initiates a cascading advanced oxidation process (AOP) coupled with in-situ orthophosphate (PO_4^{3-}) precipitation, operating without toxic heavy metal residue or persistent chemical bioaccumulation.


COMPOSITION PER KG

**ACTIVE SOLID PERHYDRATE
CRYSTALLINE MATRIX**

950 g/kg



Stabilized iron(III) mineral catalyst core 50 g/kg

Engineered catalytic solid reagent for aquatic remediation, cyanobacterial lysis, oxygenation and nutrient immobilization.

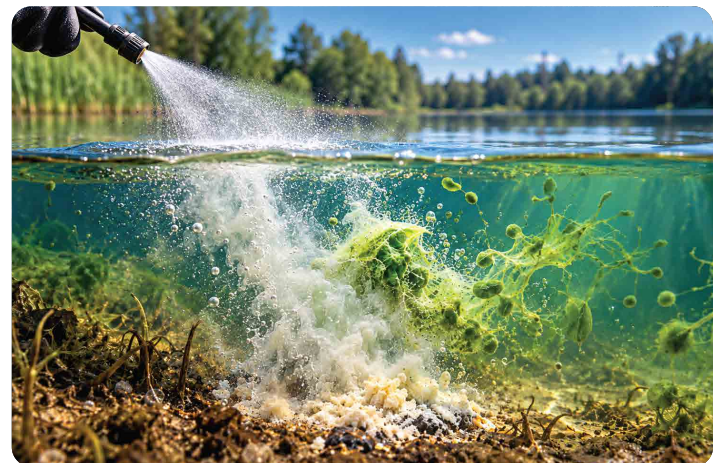

ADVANCED OXIDATION KINETICS & RADICAL GENERATION

Upon aquatic dispersion, **RedOxy NANO™** dissolves rapidly, releasing hydrogen peroxide (H_2O_2) and localized alkaline buffer ions into the immediate micro-environment. In the presence of the integrated iron(III) catalytic catalyst, a heterogeneous Fenton-like catalytic reaction cycle is triggered at the solid-liquid interface:



The generation of highly non-selective hydroxyl radicals ($\bullet\text{OH}$, $E^0 = +2.80 \text{ V}$) and selective carbonate radicals ($\text{CO}_3^{\bullet-}$, $E^0 = +1.59 \text{ V}$) induces catastrophic oxidative damage to unshielded cyanobacterial thylakoid membranes, causing cellular collapse and halt of photosynthesis within hours.

>99.4% Cyanobacteria Lysis (<12 Hours)	14.0 g/kg PO_4^{3-} Immobilization Yield	100% Non-Persistent / Eco-Neutral
---	---	--



PREMIUM QUALITY
MADE IN GERMANY

REDOXY NANO



MECHANISM

FOUR-STAGE MECHANISTIC REACTION PATHWAY



STAGE I

RADICAL ATTACK

Fe^{3+} Fenton Kinetics
HO• Membrane Lysis
Toxin Breakdown



STAGE II

PO_4^{3-} LOCK

$\text{Fe}^{3+} + \text{PO}_4^{3-} \rightarrow \text{FePO}_4(\text{s})$
Insoluble Mineral Cap
 $K_{\text{sp}} = 1.3 \times 10^{-22}$



NANOBUBBLES

Nucleation of O_2 Phase
Benthic Oxygenation
Sludge Digestion




STAGE IV

FLOTATION

Micro-Floc Coagulation
Surface DGF Separation
Effluent Clarity

BENTHIC PHOSPHATE SEQUESTRATION THERMODYNAMICS

The primary driver of recurring algal blooms is dissolved orthophosphate (PO_4^{3-}) recycling from benthic sediments. RedOxy NANO™ provides a permanent, irreversible solution by liberating free iron(III) cations that rapidly bind dissolved phosphorus species to form insoluble ferric phosphate (FePO_4):



STABLE pH WINDOW



Because the solubility product constant (K_{sp}) of FePO_4 is exceptionally low, the precipitated complex remains chemically stable across a wide pH window (5.5 to 8.2) and under continuous anoxic benthic conditions.

The dense precipitate settles into the sediment matrix, forming a permanent inorganic barrier cap that prevents the re-release of phosphorus into the photic zone.

PHOTIC ZONE Phosphorus re-release prevented

FePO_4 BARRIER CAP Permanent inorganic cap

SEDIMENT MATRIX Benthic sediment

FOUR-STAGE MECHANISM FOR LASTING WATER RESTORATION

RedOxy NANO™ combines radical oxidation, phosphate sequestration, nanobubble oxygenation, and flotation to break down algal contaminants, immobilize phosphorus, and support long-term water quality restoration.



OXYGENATION PHYSICS

NANOBUBBLE HYDRODYNAMICS & OXYGENATION

During the controlled catalytic decomposition of the active oxygen carrier, sub-micron oxygen gas phase bubbles (100–300 nm diameter) nucleate in-situ within the water column. Unlike macro-bubbles (>2 mm), which exhibit rapid buoyant rise velocity (>20 cm/s) and collapse at the atmosphere interface, oxygen nanobubbles exhibit distinct physical behavior:



MACRO-BUBBLE
> 2 mm • > 20 cm/s rise



NANOBUBBLE
100–300 nm diameter



3-6 WEEKS
EXTREME RESIDENCE TIME

Brownian motion dominates buoyant force, allowing nanobubbles to remain suspended for 3–6 weeks.



> 12 mg/L DO
HIGH INTERNAL PRESSURE & MASS TRANSFER

Young-Laplace internal pressure (> 3 bar) elevates liquid phase dissolved oxygen (DO) up to saturation (> 12 mg/L).




–25 to –40 mV
NEGATIVE SURFACE CHARGE

A negative zeta potential prevents coalescence and promotes electrostatic attachment to positively charged micro-flocs and suspended particulate matter.



COMPARATIVE ECOTOXICOLOGICAL & TECHNICAL PERFORMANCE

Performance Benchmark	Copper Sulfate (CuSO ₄)	Standard Hydrogen Peroxide	RedOxy NANO™ System
Cyanobacteria Lysis Rate	Rapid (4–8 Hours)	Moderate (24–48 Hours)	Rapid (<12 Hours)
Orthophosphate Binding	None (0%)	None (0%)	High (>14 g PO ₄ ³⁻ / kg)
Sediment Heavy Metal Accumulation	High Bio-Accumulation (Cu ²⁺)	None (0%)	Zero Heavy Metals (0%)
Benthic Dissolved Oxygen Depletion	Severe (Causes Fish Kills)	Neutral to Slight Rise	High Elevation (Nanobubbles)
Water Clarity Improvement	Poor (Secondary Debris)	Moderate	Excellent (In-Situ DGF)
Long-Term Bloom Prevention	Poor (Triggers Resurgence)	Poor (No Nutrient Removal)	Superior (Nutrient Locking)

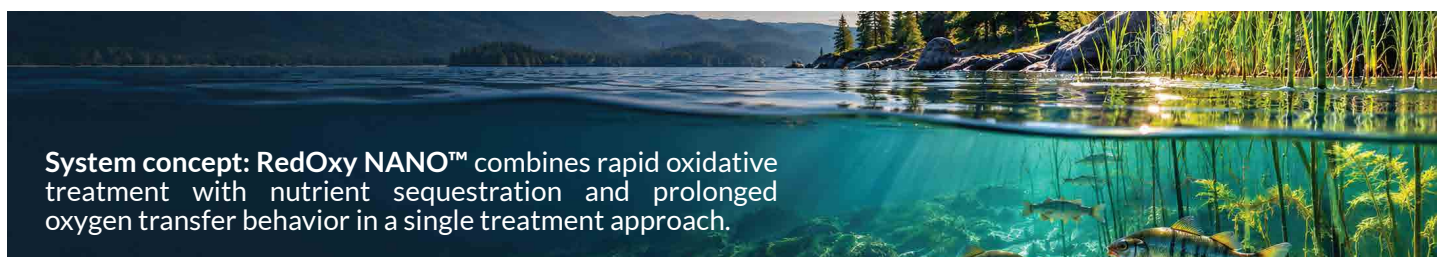

System concept: RedOxy NANO™ combines rapid oxidative treatment with nutrient sequestration and prolonged oxygen transfer behavior in a single treatment approach.

**FILTERSORB
FILTRATION
ADSORPTION
INSTANT PRODUCTS
OXY TREATMENT
SYSTEMS**

ANALYTICAL PHYSICAL & CHEMICAL SPECIFICATIONS

ANALYTICAL PARAMETER	SPECIFIED VALUE / RANGE	STANDARD TEST METHOD
Physical Form	Free-flowing micro-granular solid with reddish tracer	Visual / Gravimetric
Active Oxygen Content (AvO)	≥ 13.0% w/w Equivalent Active Oxygen	ISO 3123 / KMnO ₄ Titration
Iron(III) Catalyst Concentration	14.0 g/kg (as elemental Fe ³⁺)	ICP-OES Spectroscopy
Bulk Density	0.98 – 1.08 g/cm ³	ASTM D1895
pH (10 g/L Aqueous Solution)	10.3 – 10.7 at 20°C	Standard Glass Electrode
Mean Granule Particle Size	0.2 – 1.2 mm	Laser Diffraction (ISO 13320)
Thermal Stability (SADT)	> 55°C (Self-Accelerating Decomposition Temp)	UN Test H.4

RedOxy NANO™

**DECOMPOSES ENTIRELY INTO NATURAL OXYGEN,
WATER, SODIUM IONS AND IRON MINERALS.**

DOSING & STOICHIOMETRIC MATRIX

Water Classification	Algae Density / Turbidity	RedOxy NANO™ Dosage	Phosphate Removal Yield
Maintenance / Oligotrophic	Low turbidity (Secchi >1.2 m)	2.5 – 5.0 g/m ³ (2.5 – 5.0 ppm)	0.035 – 0.070 mg/L PO ₄ ³⁻
Moderate Eutrophic Bloom	Planktonic green water (Secchi 0.5–1.0 m)	5.0 – 10.0 g/m ³ (5.0 – 10.0 ppm)	0.070 – 0.140 mg/L PO ₄ ³⁻
Severe Hyper-Eutrophic Bloom	Thick cyanobacteria surface scum	10.0 – 20.0 g/m ³ (10.0 – 20.0 ppm)	0.140 – 0.280 mg/L PO ₄ ³⁻
Acid Wastewater / Industrial	High COD, low pH (<5.0)	20.0 – 50.0 g/m ³ + Buffer	Requires Bench Jar Test

Mandatory Alkaline Carbonate Buffer Protocol: For aquatic systems with Total Alkalinity <50 mg/L as CaCO₃ or initial pH <6.5, co-dose RedOxy NANO™ with RedOxy Carbonate Buffer. Maintaining system pH above 6.8 is mandatory to achieve complete ferric phosphate (FePO₄) precipitation and optimize the zeta potential of the generated nanobubble phase.



Standard Packaging

Packaging	Weight of product	Quantity/pallet	Gross Wt./pallet
Drum	60 kg	18	1163 kg

★ Other packaging can be considered on request

